


ORIGINAL STRAT WIRING


Villex
USA

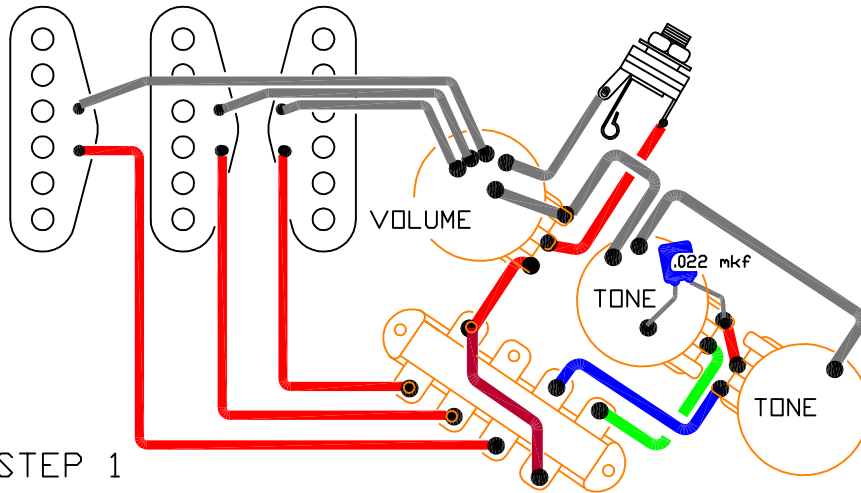

STEP 1

REMOVING ONE TONE POT AND MAKING THE OTHER, MASTER


Villex
USA

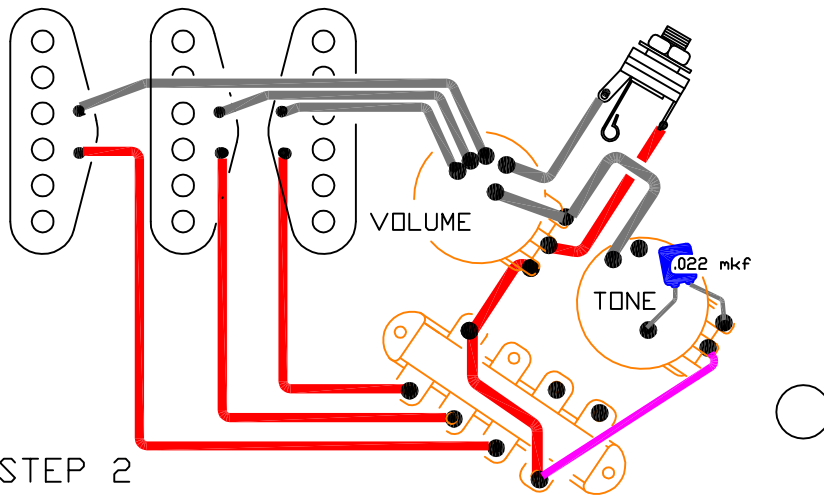

STEP 2

INSTALLING POTARY TONE BOOSTER

Villex
USA

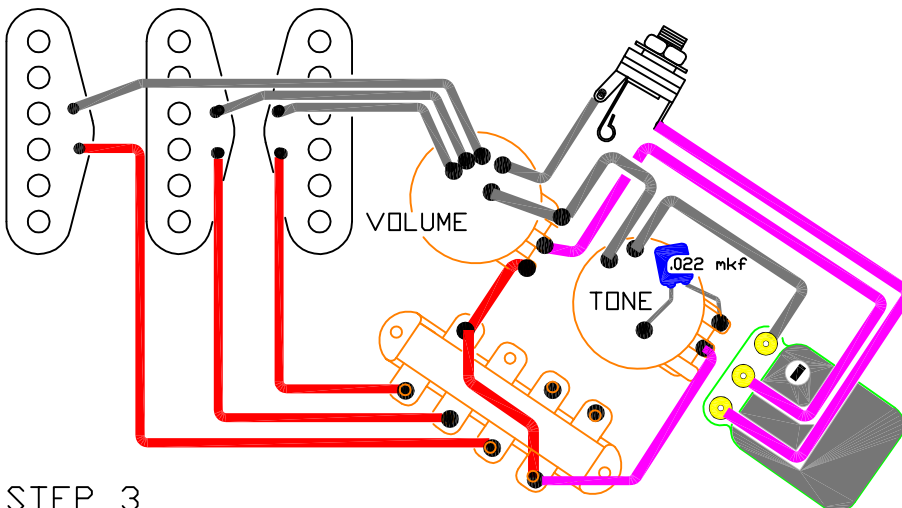

STEP 3